

MODG-100 Modbus/TCP gateway


Quick start reference guide

 This document is a reference guide only and must be used in conjunction with the *MODG-100 User manual*.

IGMODG100-2201

INSTALLATION

Regulatory notes

-  1. The *MODG-100* is suitable for use in non-hazardous locations only.
- 2. The *MODG-100* is not authorized for use in life support devices or systems.
- 3. Wiring and installation must be in accordance with applicable electrical codes in accordance with the authority having jurisdiction.
- 4. This is a Class A device and intended for commercial or industrial use. This equipment may cause radio interference if used in a residential area; in this case it is the operator's responsibility to take appropriate measures.
- 5. The precondition for compliance with EMC limit values is strict adherence to the guidelines specified in the *MODG-100 User manual*. This applies in particular to the area of grounding and shielding of cables.

FCC Notice (USA only)

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Industry Canada Notice (Canada only)

This Class A digital apparatus complies with Canadian ICES-003.

SAFETY PRECAUTIONS




ELECTRICAL HAZARD


- This equipment must be installed and serviced only by qualified personnel. Such work should be performed only after reading the *MODG-100 User manual* in its entirety.
- Before performing visual inspections, tests, or maintenance on this equipment, disconnect all sources of electric power. Assume that all circuits are live until they have been completely de-energized, tested, and tagged. Pay particular attention to the design of the power system. Consider all sources of power, including the possibility of backfeeding.
- Apply appropriate personal protective equipment and follow safe electrical practices.
- Turn off all power supplying the equipment in which the *MODG-100* is to be installed before installing, wiring or removing the *MODG-100*.
- Always use a properly rated voltage sensing device to confirm that power is off.
- The successful operation of this equipment depends upon proper handling, installation, and operation. Neglecting fundamental installation requirements may lead to personal injury as well as damage to electrical equipment or other property.

Failure to follow these instructions could result in death or serious injury!

DIN rail mounting and removal

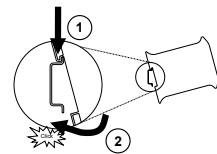


To mount the unit on a DIN rail, slot the top part of the *MODG-100* into the upper guide of the rail and lower the enclosure until the bottom of the red hook clicks into place.

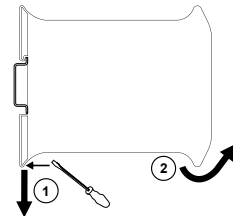

To remove the *MODG-100* from the DIN rail, use a screw driver as a lever by inserting it in the small slot of the red hook and push the red hook downwards. Then remove the unit from the rail by raising the bottom front edge of the enclosure.

Mounting rules

-  • No water splash and water drops
- No aggressive gas, steam or liquids
- Avoid dusty environments.
- Avoid shock or vibration
- Do not exceed the specified operational temperatures and humidity range.
- Mount inside an electrical switchboard or control cabinet.
- Make sure there is sufficient air ventilation and clearance to other devices mounted next to the unit.
- Observe applicable local regulations like EN60204 / VDE0113.

INTRODUCTION

Package Contents

- *MODG-100* unit
- Quick start reference guide
- 2-pin terminal block plug
- 6-pin terminal block plug

Documentation and Additional Resources


This Quick start reference guide must be used in conjunction with the *MODG-100 User manual*.









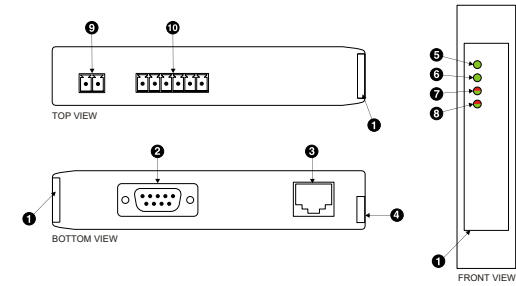

The *MODG-100 User manual* and supplemental software packages can be downloaded from the *MODG-100* web site:
<http://www.proconx.com/modg100>

Quick start checklist


- Obtain a copy of the *MODG-100 User manual* and read it properly and in its entirety.
- Mount the unit.
- Connect the power. Do not connect yet serial ports.
- Configure the Ethernet communications settings with a web browser (using an Ethernet crossover cable) or with a terminal program like *HyperTerminal* (using a null modem cable)
- Configure the serial line communication settings.
- Configure the operational aspects of the device.
- Wire serial line interfaces.

DESCRIPTION




-  Clear front cover
-  RS-232 connector
-  Ethernet connector
-  DIN rail clip
-  Power LED
-  Ethernet link LED
-  Status 1 LED
-  Status 2 LED
-  Power terminals
-  RS-485/RS-422 terminals

Before connecting anything

-  1. Before installing or removing the unit or any connector, ensure that the system power and external supplies have been turned off.
- 2. Check the system supply voltage with a multimeter for correct voltage range and polarity.
- 3. Connect the power supply cable and switch on the system power. Check if the Power LED is lit.
- 4. Turn off system power.
- 5. Connect all I/O cables.
- 6. Once you are certain that all connections have been made properly, restore the power.

Power terminals pin assignment

 Before connecting power please follow the rules in the section called "SAFETY PRECAUTIONS" and the section called "Before connecting anything".



1	V+	Positive voltage supply (10 - 30 V DC)
2	V-	Negative voltage supply, DC power return





Make sure that the polarity of the supply voltage is correct before connecting any device to the serial ports! A wrong polarity can cause high currents on the ground plane between the V- power supply pin and the serial port ground pins, which can cause damage to the device.

Please observe the wiring, grounding and shielding instructions described in the *MODG-100 User manual*!

RS-485/RS-422 terminals pin assignment

Pin	RS-485	RS-422	Description
3	GND	GND	Modbus Common
4	D+	TX+	Modbus D1 or TXD1
5	D-	TX-	Modbus D0 or TXD0
6	GND	GND	Modbus Common
7	RX+	RX+	Modbus RXD1
8	RX-	RX-	Modbus RXD0



Do not connect the cable shield to the GND pin! Use an external chassis ground connection to terminate the shield.



The *MODG-100* does not require maintenance, nor does it contain any user-serviceable parts. If the *MODG-100* requires service, contact us directly for assistance.

Refer to the technical support contacts provided at the end of this document.

Do not open the *MODG-100* enclosure; this will void the product warranty.

Diagnostics and troubleshooting



ELECTRICAL HAZARD


- This equipment must be installed and serviced only by qualified personnel.
- Qualified persons performing diagnostics or troubleshooting that require electrical conductors to be energized must comply with and follow safe electrical work practices.
- Failure to follow these instructions could result in death or serious injury!**

The status web pages served by the *MODG-100*, display diagnostic data that may be helpful in troubleshooting communication problems.

In addition the About page contains information about your specific *MODG-100*, including the serial number and media access control (MAC) address. Some of these pages show a Clear Counter button. Clicking this button clears all cumulative readings shown on this particular page. If power to the *MODG-100* is lost, all values reset to zero.

RS-232 connector pin assignment

Pinout as per EIA-574 DTE. Please observe the cabling instructions described in the *MODG-100 User manual*!



1	DCD	(unused)	in
2	RXD	Receive data	in
3	TXD	Transmit data	out
4	DTR	(unused)	out
5	GND	Signal ground	in
6	DSR	(unused)	in
7	RTS	(unused)	out
8	CTS	(unused)	in
9	RI	(unused)	in

LED indicators

A LED test is exercised at power-up, cycling each LED off, green and then red for approximately 0.25 seconds. At the same time the power-on self test of the device is performed.

The following table outlines the indicator condition and the corresponding status after the power-on self test has been completed:

LED	Function	Condition	Indication
Power	Power	Off	No power applied to the device.
Link	Ethernet	Off	No Ethernet link
Link	Ethernet	Green	Ethernet link OK
Status1	Device status	Green	The device is operating in normal condition.
Status1	Device status	Flashing red	Device operational but has a fault listed which requires acknowledgement.
Status1	Device status	Flashing red	Device operational but has a fault listed which requires acknowledgement.
Status2	Communication status	Green	Modbus/TCP connection established.
Status2	Communication status	Off	No Modbus/TCP connection.
Status2	Communication status	Flashing green	Device operational but needs commissioning due to configuration missing, incomplete or incorrect.
Status2	Communication status	Flashing green	The device has an unrecoverable fault; may need replacing.
Status2	Communication status	Off	The device has an unrecoverable fault; may need replacing.
Status2	Communication status	Flashing green	The device has an unrecoverable fault; may need replacing. Flashing sequence and rate of Status2 LED indicates fault class.

SPECIFICATIONS

Power supply

Voltage	10-30 V DC
Current	30 ma typical @ 24 V DC
Intrinsic consumption	750 mW
Emissions	AS/NZS CISPR 22 / EN 55022 (Class A)
Immunity	EN 55024
Electrostatic discharge	EN 61000-4-2
Fast transients	EN 61000-4-3
Conducted RF	EN 61000-4-4
Radiated RF	EN 61000-4-3
Material	Self-extinguishing PC/ABS blend (UL 94-V0)
Mounting	35 mm DIN rail (EN 60715)
Classification / Type rating	IP 20 / NEMA Type 1
Cooling	Convection
Environmental	Operating temperature 0 to 60 °C / 32 to 140 °F Storage temperature -25 to 85 °C / -13 to 185 °F Humidity rating 10 to 95% relative humidity, non condensing
Physical	Operating ambience Free from corrosive gas, minimal dust
Dimensions	101 x 22.5 x 120 mm / 3.98 x 0.886 x 4.72 in
Weight	0.12 kg / 0.265 lb


Compliance	C-Tick
Australia	CE, RoHS
Europe	FCC Part 15 (Class A)
USA	ICES-003 (Class A)
Canada	

Use as critical components in life support devices or systems.

IP setup using a terminal program like HyperTerminal

Please consult the *MODG-100 User manual* for further details on this method.

The configuration pages are accessed using the integrated web server:

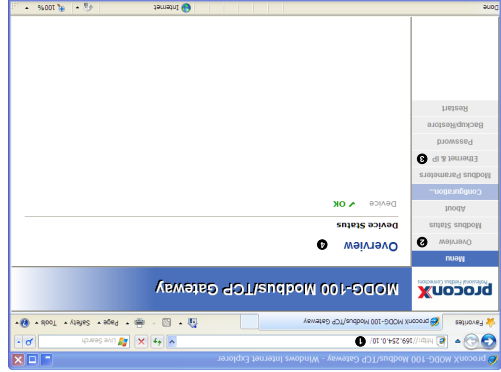

Please consult the *MODG-100 User Manual* for further details how to set-up the *MODG-100*.

- 1 Gateway IP address
- 2 Main menu
- 3 Configuration sub-menu
- 4 Information area

CONTACT

This product is designed and manufactured by:

proconX Pty Ltd
www.proconX.com

Technical support

We provide an electronic support and feedback system for our *proconX* products. It can be accessed through the following web link:

<https://www.proconX.com/support>

Product Returns

Before returning any product for service, repair or warranty, obtain first a RMA (Returned Material Authorization) number by contacting our technical support.

Specifications subject to change without notice.

Copyright © *proconX* Pty Ltd. All rights reserved.

proconX Pty Ltd makes no warranty for the use of its products, other than those expressly contained in the company's standard warranty which is detailed in the Terms and Conditions located on the company's Website. The company reserves the right to change devices or specifications detailed herein at any time without notice, and does not make any commitment to update the information contained herein. No licenses to patents or other intellectual property of *proconX* are granted by the Company in connection with the sale of *proconX* products, expressly or by implication. *proconX* products are not authorized for

use as critical components in life support devices or systems.